



DepthQ-WXGA

HIGH DEFINITION 3D VIDEO PROJECTOR



Cleaning the Lens

- 1 Apply a non-abrasive camera lens cleaner to a soft, dry cloth.

Avoid using an excessive amount of cleaner, and don't apply the cleaner directly to the lens. Abrasive cleaners, solvents or other harsh chemicals might scratch the lens.

- 2 Lightly wipe the cleaning cloth over the lens in a circular motion. If you don't intend to use the projector immediately, replace the lens cap.

Clean the lens
with a soft dry cloth
and non-abrasive
cleaner

